



GENERATOR START

LOW VOLTAGE THRESHOLD SETUP

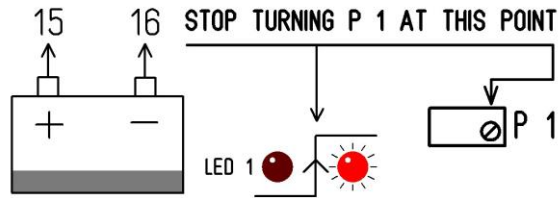

GENERATOR STOP

HIGH VOLTAGE THRESHOLD SETUP

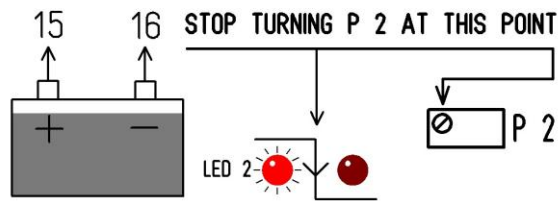

HOW TO SET UP THE BVS LOW THRESHOLD

1. Disable BVS via dip switch 1 (move to OFF position).
2. Connect your discharged (ready to be charged) battery bank to terminals 15 and 16.
3. Start turning P1 (very slowly) and find the position when LED1 changes its state from OFF to ON.
4. Stop turning immediately when you notice this change.

HOW TO SET UP THE BVS HIGH THRESHOLD

1. Connect your fully charged battery bank to terminals 15 and 16.
2. Start turning P2 (very slowly) and find the position when LED2 changes its state from ON to OFF.
3. Stop turning immediately when you notice this change.
4. Enable BVS via dip switch 1 (move to ON position).